


$$SLB = LMB + P1 + P2$$

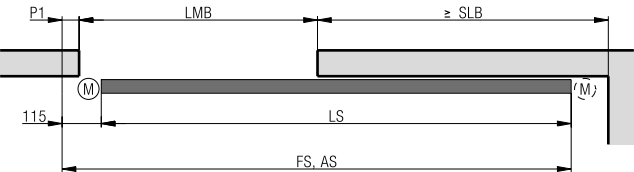

$$LS = (2 \times SLB) - P2 - 115 \text{ mm}$$

$$FS = LS + 115 \text{ mm}$$